How to update White tile TOS data through Aeros Essentials

Required: Aeros Essentials 1.03.0074 and above

- 1. Attach this thumb drive including the white tile csv file in front USB port of Aeros.
- 2. Go to Workspace menu/Diagnostics/Advanced, scroll down the center area and click "Restore tile data".
- 3. Select the while tile csv file and click OK to update the white tile TOS data. Toast message, "Restore tile data successfully", will be showed after updating the TOS data correctly.
- 4. Now, it is ready to use the new white tile to do standardization and measure samples.

	Color Data Table [D65/10]		$\hat{\mathbf{U}}$	٢	\$ ■		
	Diagnostics					Γ	
\langle	Performance		Advan	Advanced			
	Sensor Head Position Top Bottom	Park for Shipping Printer Drivers					
	Read Signal Dark Zero Loop	Restart COMM					
	Turntable Rotation: Start	Support Region Restart Remote					
	Log	Restore Tile Data					
	Enable Export Size: 140.951 KB	Vacuum DB					
					Close		
	<i>i</i> Standardized		J	ob: Untitled*	Workspace: Defau	lt	

